


19551 C1124-F


Focus Gear for Canon EF 11-24mm f/4L USM

Please follow the instructions below to mount the dedicated focus gear on the lens.

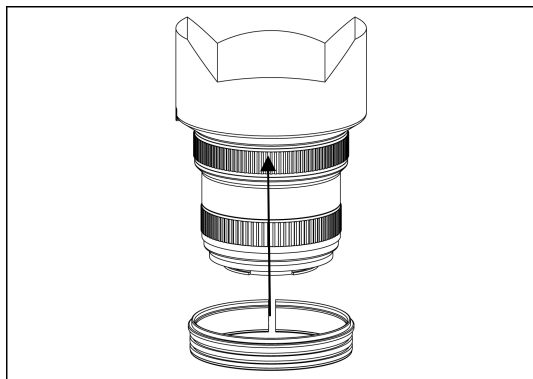


1. Insert the plastic c-ring as shown and place it over the lens rubber focus ring.

Note for the orientation of the c-ring, the large end should be on top.

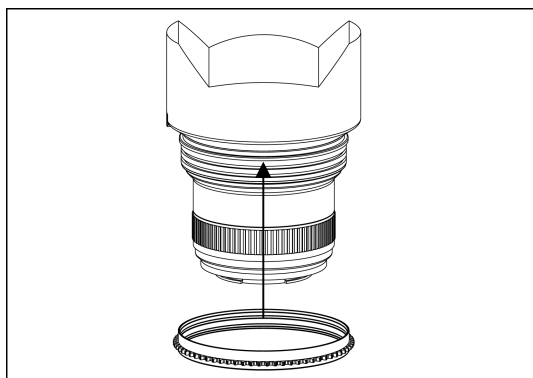

2. Insert the gear of C1124-F on the plastic c-ring until it reaches the flange of the plastic c-ring.

Note for the orientation of the gear, the toothed end should be on the bottom.

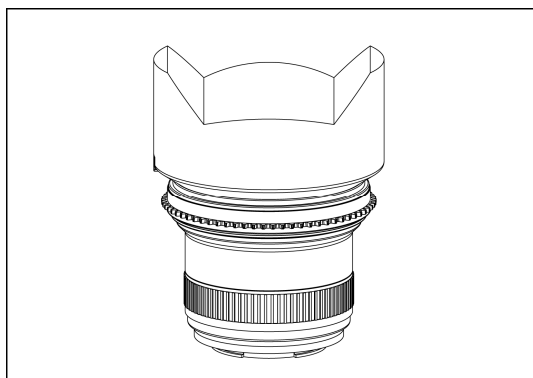

3. To remove the C1124-F gear, reverse the above steps.
4. The tightness between the C1124-F gear and the lens can be adjusted by removing or adding rubber grips on either sides of the plastic c-ring, spare rubber grips are included in the package.