

<u>N85-N100 / N85-N120 / N100-N120</u>

Port Adaptor

Instruction Manual

FOREWORD

Thank you for your purchase of a NAUTICAM product.

At NAUTICAM, we pride ourselves in the ability to recognise the requirements of professional as well as amateur underwater photographers and fulfill them through the innovative designs of our products. We strive to achieve a high level of user-friendliness by allowing stress-free installation and easy operation of all important functions of the camera.

Please read this manual carefully before using the product, this will maximise its performance as well as its lifetime.

WARRANTY

All NAUTICAM Products are warranted against any material and manufacturing defects for two years from the date of purchase for consumer use. This warranty only applies to products purchased from authorised NAUTICAM dealers and does not extend beyond the original retail purchaser.


To return your product for service, please contact your regional authorized service centre(s). Please note that this warranty only applies when the product is purchased in the territory where the service centre is located.

NAUTICAM does not hold responsibility for damage, of any nature, to any equipment used with and/or placed within our products.


NAUTICAM accepts no liability for any loss of captured images or the inability to capture images even if it is due to the malfunctioning of our products.

Unauthorised modifications and/or repairs of our products will automatically invalidate the warranty.


IDENTIFICATION OF PARTS

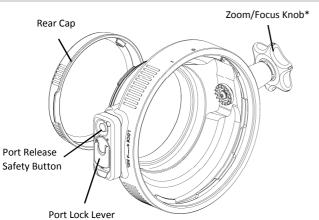

*some model of port adaptor do not have zoom/focus knob **the position of the port lock may vary from models

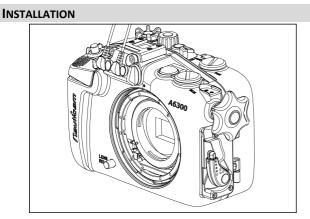


Install the camera body only into the housing and attach the optical fiber cables to the housing.

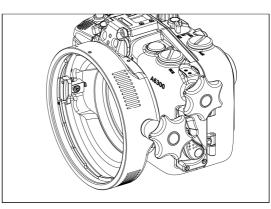


Mount the port adaptor to the housing.

*Please refer to the housing manual for installing camera and mounting port to the housing.

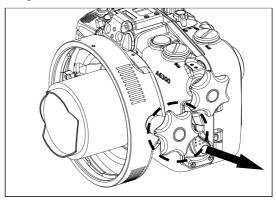


Mount the lens (with gear attached) on the camera.


ATTENTION: For port adaptor with zoom/focus knob, make sure that the knob on the adaptor is at its most outward position before mounting/ dismounting the lens. The knob should be left at this position until it is made sure that the lens and gear is properly installed.

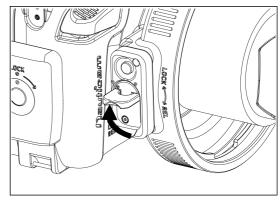


Lift the Port lock/ release latch on the other side of the adaptor.

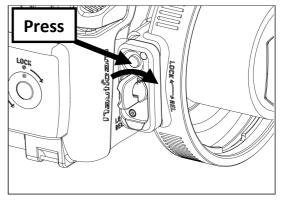


Press and hold the port release safety button, turn the port lock/release latch clockwise until it stops.

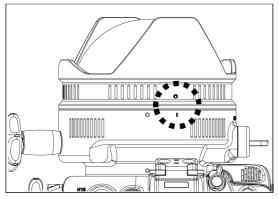


Align the "I" mark on the adaptor with the WHITE dot on the port. Gently push the port towards the adaptor until it cannot go in any further.

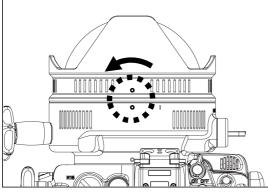

Turn the port anti-clockwise until the white dot on the adaptor aligns with the white dot on the port.

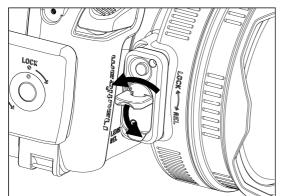

To lock the port in place, turn the port lock/release latch anti-clockwise to the original position and then flip it down.

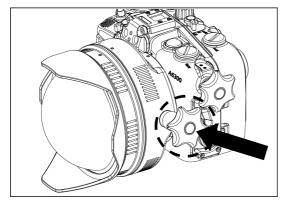

For port adaptor with knob, engage the gear on the lens by pushing the knob inwards, then turn the knob both ways to check if the lens is functioning

To unlock, reverse the above procedures.

SPECIFICATIONS

Depth Rating:	100m