

<u>Instruction Manual for N50 Short Port with</u> <u>Bayonet Mount (To use with WWL-1)</u>

PN# 38703

FOREWORD

Thank you for your purchase of a NAUTICAM product.

At NAUTICAM, we pride ourselves in the ability to recognize the requirements of professional as well as amateur underwater photographers and fulfill them through the innovative designs of our products. We strive to achieve a high level of user-friendliness by allowing stress-free installation and easy operation of all important functions of the camera.

Please read this manual carefully before using the product, this will maximize its performance as well as its lifetime.

WARRANTY

All NAUTICAM Products are warranted against any material and manufacturing defects for two years from the date of purchase for consumer use. This warranty only applies to products purchased from authorized NAUTICAM dealers and does not extend beyond the original retail purchaser.

To return your product for service, please contact your regional authorized service center(s). Please note that this warranty only applies when the product is purchased in the territory where the service center is located.

NAUTICAM does not hold responsibility for damage, of any nature, to any equipment used with and/or placed within our products.

NAUTICAM accepts no liability for any loss of captured images or the inability to capture images even if it is due to the malfunctioning of our products.

Unauthorized modifications and/or repairs of our products will automatically invalidate the warranty.

IDENTIFICATION OF PARTS





MOUNT TO THE HOUSING



 Align the "I" mark on the Port with the "o" mark on the housing, then gently push the port into the port opening of the housing, until it cannot go in any further.



Turn the port clockwise until the "o" mark on the port aligns with the "o" mark on the housing and a "click" sound is heard.

MOUNTING LENS



 Align the "I" mark on the lens with the "I" mark on the Bayonet Mount and then push it in.



2. Turn the lens clockwise until the "I" mark on the lens aligns with the WHITE dot on the Bayonet Mount and a "click" sound is heard.

UN-MOUNTING LENS



1. Press and hold the RED lens release button and then turn the lens counter clockwise.




2. Remove the lens when "I" mark on the lens aligns with the "I" mark Bayonet Mount.

UN-MOUNTING PORT



1. Press and hold the RED Port release button and then turn the port counter clockwise.

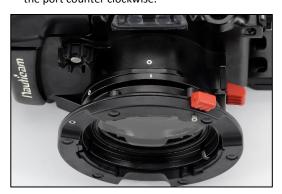

2. Remove the port when "I" mark on the port aligns with the "o" mark on the housing

Remark: All Nauticam product manual will be changed to e-manual in end of 2018. Please download corresponding product manuals on Nauticam.com website, or contact us for e-manuals.